


PLAN

1/2" = 1' 2"

- NOTES:
1. SECURE PROPER REGULATORY APPROVAL BEFORE STARTING CONSTRUCTION.
 2. VERIFY EXACT PARLOR DIMENSIONS (COW PLATFORM WIDTH AND STALL LENGTH) WITH STALL AND/OR FEEDER MANUFACTURER BEFORE STARTING CONSTRUCTION.
 3. FAN(S) & ARTIFICIAL LIGHT MUST BE INSTALLED IN MILKING AREA. (WINDOW AREA IS LESS THAN 15% OF FLOOR AREA.)
 4. ALL SWINGING DOORS ARE 3' WIDE.

NOTE
 SELECT TRUSSES THAT WILL WITHSTAND LOCAL
 SNOW AND WIND LOADS AND SUPPORT A $5 \frac{1}{12}$
 CEILING LOAD ON LOWER CHORD

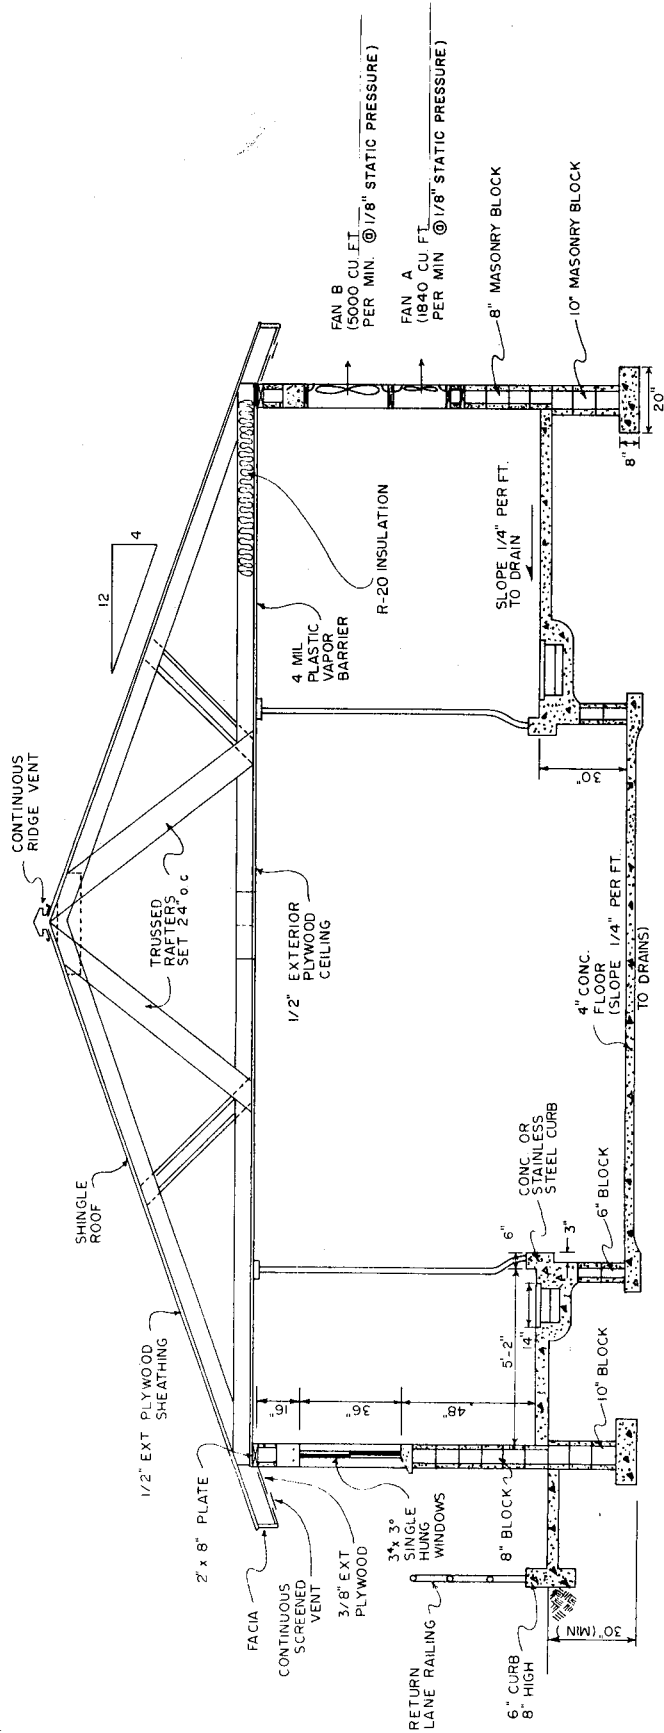

SECTION A - A

